

## Units Covered

CE Series



48 KW

54 KW

72 KW

Unit Weight - 78 lbs

## Unit Dimensions and Mechanical Info

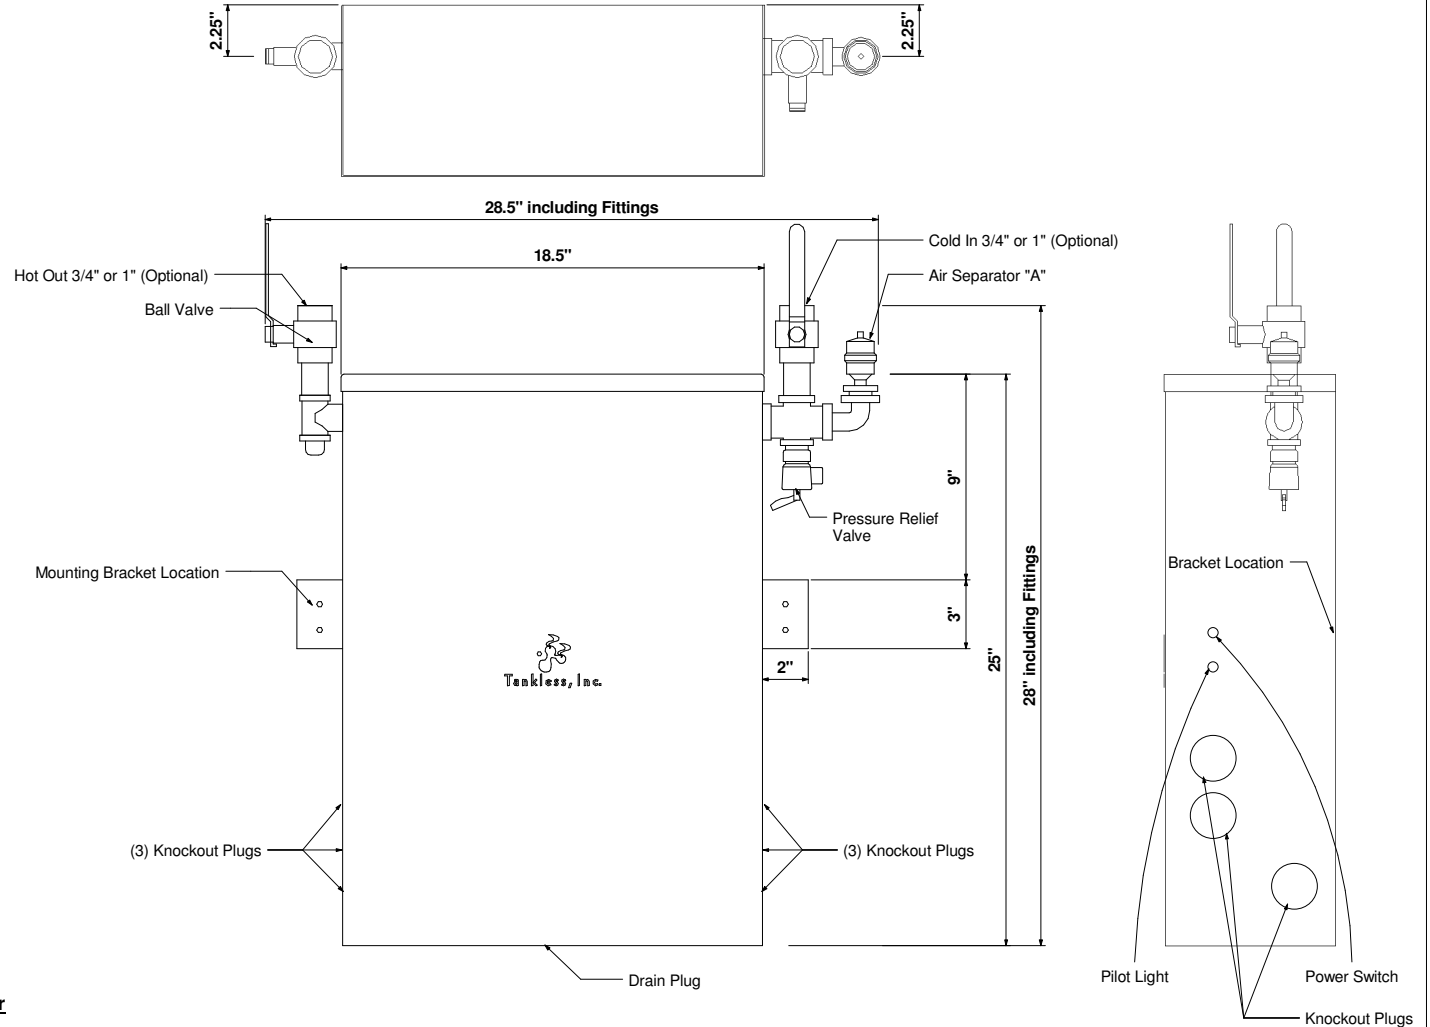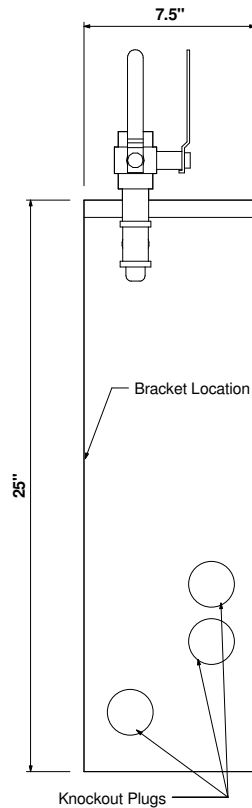

### Install Instructions for 12 element CE Series heater

1. Remove the front and top cover of the heater.
2. Mount heater to the wall using the brackets provided.
3. Insert the air separator, "A", which was also inside the heater box with the owners manual.
4. Connect hot and cold water to 3/4 in and out and the pressure relief valve to the drain.
5. Run water thru the system and test for leaks and fix leaks.
6. Connect electrical lines one thru three and ground to the heater. There is one entry point to the box on the bottom and one on each side. Verify the breaker and wire size on engineering chart based on size of heater and voltage.
7. Run water thru the heater for 20 seconds.
8. Check the delay switch setting and change if desired. The factory setting is 1 minute. Once the water pressure reading is above 3 PSI the delay timer starts and the heater comes on after the delay timeframe has elapsed.
9. Turn on the breakers.
10. Replace cover.
11. Turn on the switch to the heater.
12. Wait the 1 minute for the pressure switch to engage or whatever timeframe you used if you changed the delay timeframe.
13. Set desired temperature level using the toggle switch.
14. Remove cover to check temperature setting, adjust as necessary, and replace the cover.

#### Notes:

1. Red Lines represent customer supplied pipe or electrical
2. Main Power can come in from the bottom or either side

Tankless, Inc.  
CE Series  
12 Element Heater

DRAWN		DATE	MATERIAL		SHEET 1 OF 1
RELEASED	8/13/2013 2:19:52 PM		DO NOT SCALE DRAWING	REVISION 1	DWG.