

Units Covered

CE Series


12 KW

15 KW

18 KW

Unit Weight - 38 lbs

Unit Dimensions and Mechanical Info

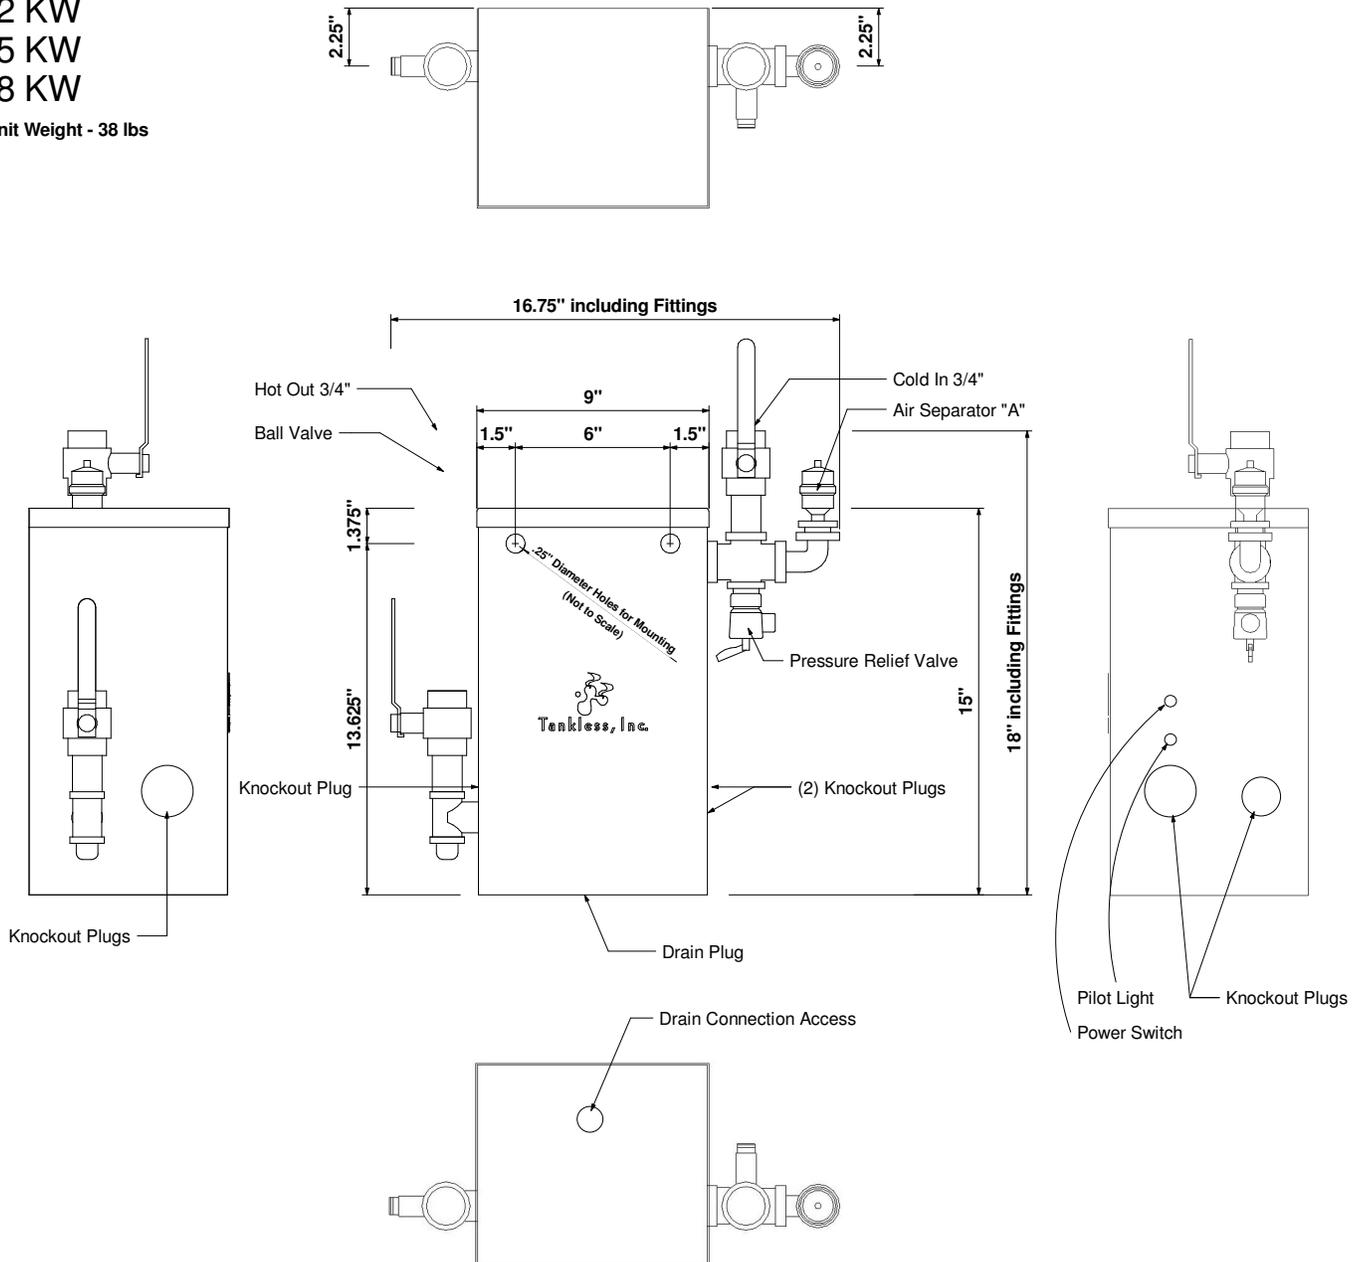

Install Instructions for 3 element CE Series heater

1. Remove the front and top cover of the heater.
2. Mount heater to the wall using the holes at the back of the box or the brackets provided.
3. Insert the air separator, "A", which was also inside the heater box with the owners manual.
4. Connect hot and cold water to 3/4 in and out and the pressure relief valve to the drain.
5. Run water thru the system and test for leaks and fix leaks.
6. Connect electrical lines one thru three and ground to the heater. There is one entry point to the box on the bottom and one on each side. Verify the breaker and wire size on engineering chart based on size of heater and voltage.
7. Run water thru the heater for 20 seconds.
8. Check the delay switch setting and change if desired. The factory setting is 1 minute. Once the water pressure reading is above 3 PSI the delay timer starts and the heater comes on after the delay timeframe has elapsed.
9. Turn on the breakers.
10. Replace cover.
11. Turn on the switch to the heater.
12. Wait the 1 minute for the pressure switch to engage or whatever timeframe you used if you changed the delay timeframe.
13. Set desired temperature level using the toggle switch.
14. Remove cover to check temperature setting, adjust as necessary, and replace the cover.

Notes:

1. Red Lines represent customer supplied pipe or electrical
2. Main Power can come in from the bottom or either side
3. 26" total minimum area recommended for installation and repairs. The extra space is needed to allow for removal of the elements.

Tankless, Inc.			
CE Series 3 Element Heater			
DATE			
DRAWN	8/13/2013 1:26:33 PM	MATERIAL	SHEET 1 OF 1
RELEASED		DO NOT SCALE DRAWING	REVISION 1 DWG.